Instruction Manual

wertheim

deep clean engineering

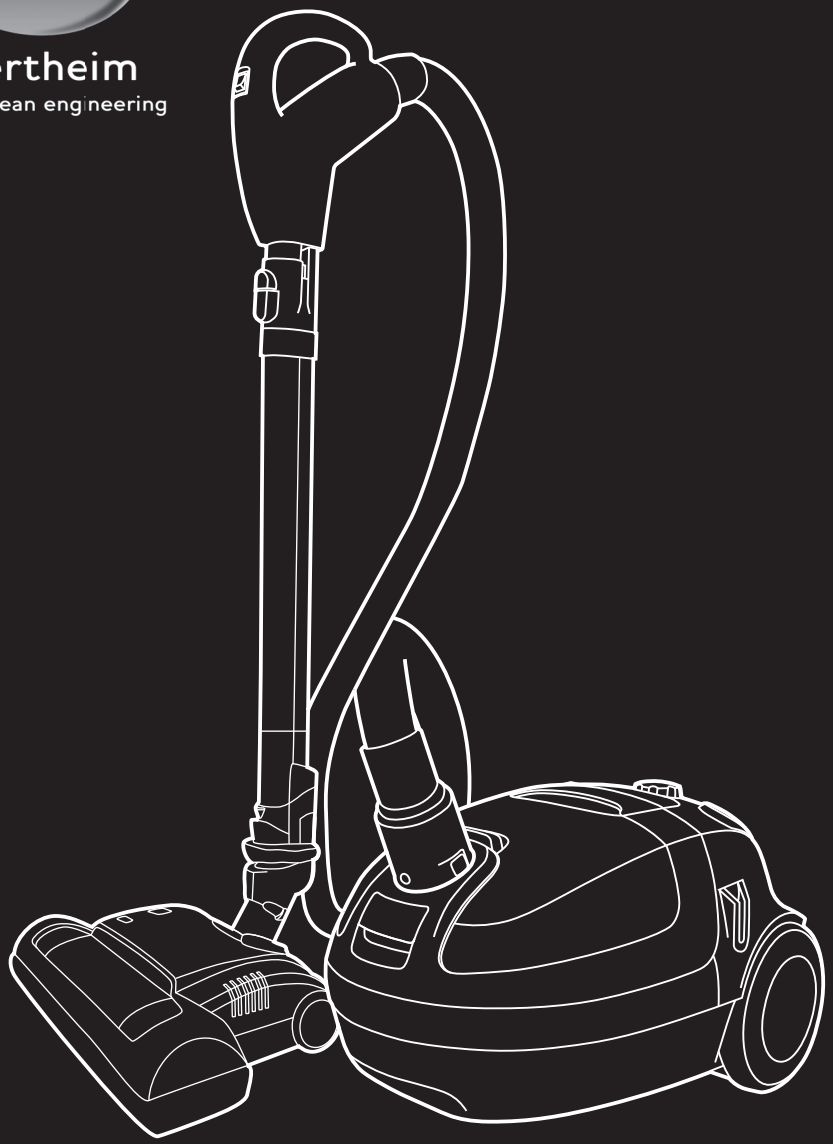

7000

2 Year WARRANTY

This warranty on your cleaner commences from the original date of purchase and is not transferable; please retain your original proof of purchase for any warranty claims. This warranty is valid only in the country where the cleaner is purchased.

The cleaner must be operated in accordance with these instructions and used only for domestic household cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics. This cleaner is not fit to be used as an industrial cleaner, and is not designed for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. The infrequent pick-up of these materials in these circumstances may be harmful to your cleaner and may void the manufacturer's warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.

When properly used and cared for, your cleaner will render excellent service; refer to the instruction manual for further details, as misuse or failure to follow the instructions makes this warranty void.

In the event of service or advice being needed, please contact International Cleaning Solutions Pty Ltd, Level 1, Building 2, Brandon Business Park, 530 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270, Monday - Friday 9am-5pm EST. Email: enquiries@wertheim.net.au

The decision to repair or replace the cleaner is at the sole discretion of International Cleaning Solutions Pty Ltd.

International Cleaning Solutions Pty Ltd is unable to accept responsibility under this warranty for any repair work not carried out by an authorised International Cleaning Solutions Service Agent or from the use of non-genuine parts. If any part is no longer available or manufactured, International Cleaning Solutions Pty Ltd will replace it with a genuine functional replacement part. This warranty does not apply to the cost of replacing any parts of the product due to normal wear and tear, alterations, improper installation, physical abuse, misuse or accidental damage. Any transportation costs involved in the repair of defective parts shall be borne by the claimant.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable. The repair or replacement of the cleaner under this warranty does not extend the original period of warranty.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Trade Practises Act and other State and Territory laws.

"Our goods come with guarantees that cannot be excluded in the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

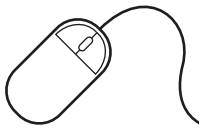

ONLINE

www.wertheim.net.au

EMAIL

enquiries@wertheim.net.au

Due to the process of continual improvement, minor changes in product design or features may occur from what is shown on the packaging.

WARNINGS & SAFETY INFORMATION

BEFORE OPERATING THIS MACHINE, PLEASE READ THESE SAFETY INSTRUCTIONS CAREFULLY

For Household Use Only

When using your Wertheim vacuum, basic safety precautions should always be observed, including the following:

1. Only use this machine indoors on dry surfaces
2. Turn off the vacuum controls before connecting or disconnecting from the electrical outlet
3. Do not run over power supply cord
4. Do not use machine if the power supply cord is damaged
5. Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
6. Do not pull or carry machine by the power supply cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners, run the machine over the cord, or expose the cord to heated surfaces
7. Do not carry the machine while turned on and in use
8. Do not unplug by pulling on the power supply cord, unplug the cord by grasping the plug, not the cord
9. Do not handle the machine or the plug with wet hands. Do not use outdoors or on wet surfaces
10. Use only the recommended attachments for this machine
11. Do not put any foreign object into machine openings, or use with blocked openings or restricted air flow
12. Do not expose hair, loose clothing, fingers, or other body parts to openings or moving parts of the machine
13. Do not pick up hot or burning objects
14. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapors
15. Do not pick up toxic material (chlorine, bleach, ammonia, drain cleaner, petrol etc)
16. Do not use machine in an enclosed space filled with vapors from oil based paint, paint thinner, some moth proofing surfaces, flammable dust, or other explosive toxic vapors
17. Remove plug from electrical outlet before cleaning the machine
18. Not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety
19. Keep out of reach of children
20. Store the machine indoors in a cool, dry area
21. Do not modify the earthed plug
22. Do not use for any purpose other than described in this instruction manual

This machine is intended for household use only and not for commercial or industrial use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

7000 PARTS

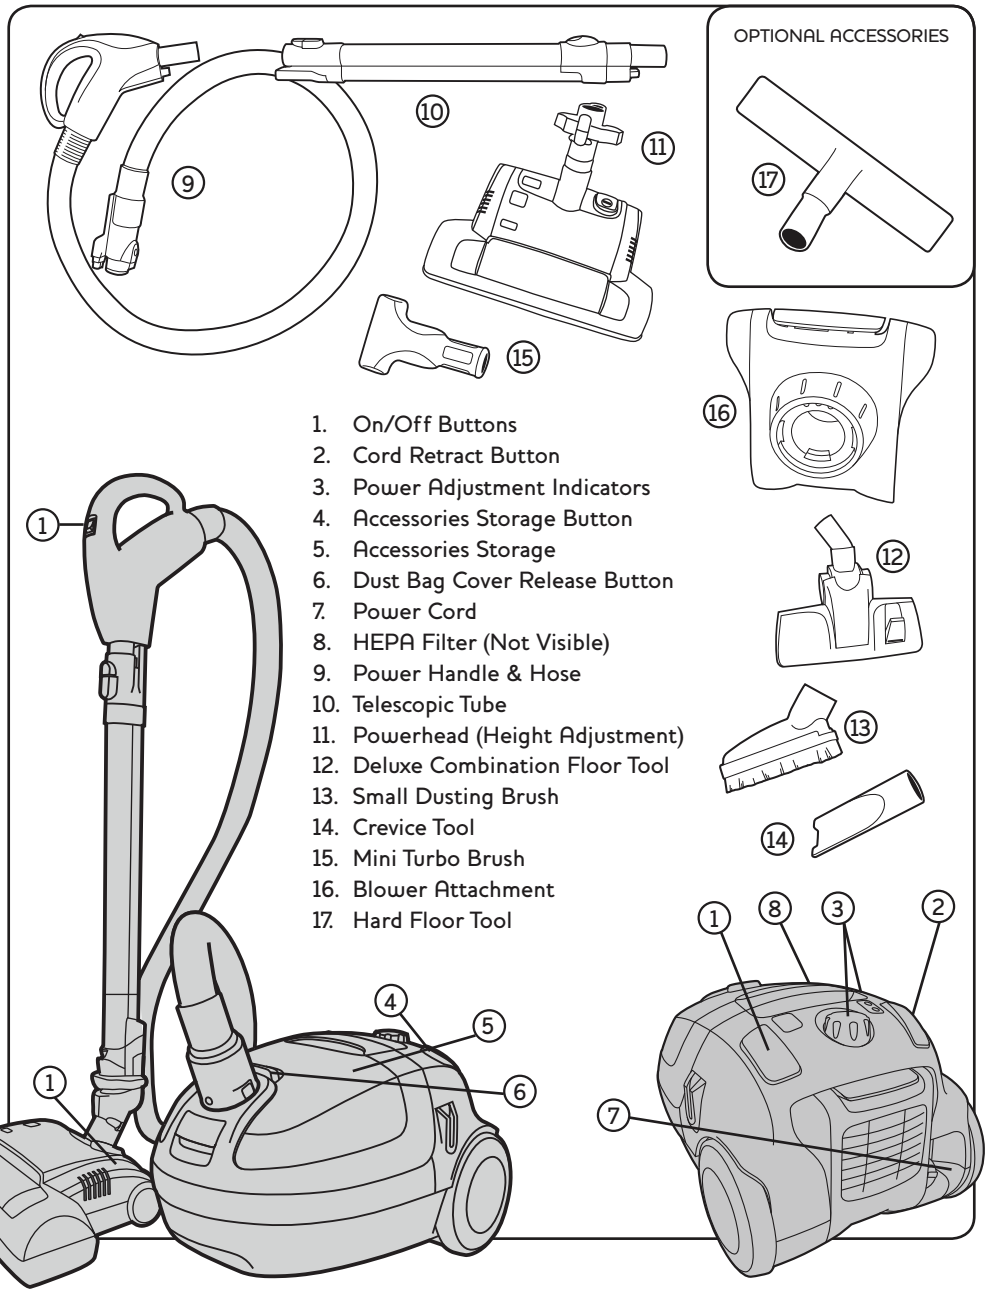

1. On/Off Buttons
2. Cord Retract Button
3. Power Adjustment Indicators
4. Accessories Storage Button
5. Accessories Storage
6. Dust Bag Cover Release Button
7. Power Cord
8. HEPA Filter (Not Visible)
9. Power Handle & Hose
10. Telescopic Tube
11. Powerhead (Height Adjustment)
12. Deluxe Combination Floor Tool
13. Small Dusting Brush
14. Crevice Tool
15. Mini Turbo Brush
16. Blower Attachment
17. Hard Floor Tool

ASSEMBLY STEPS

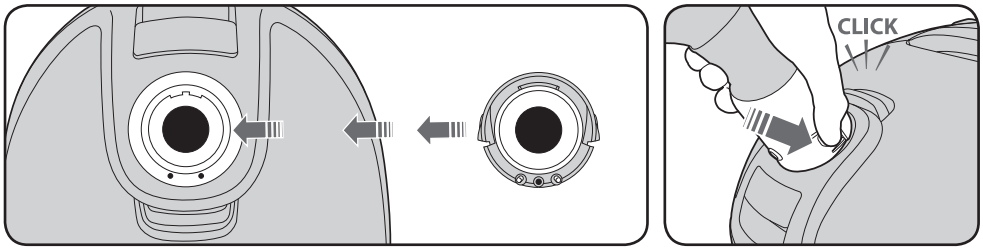

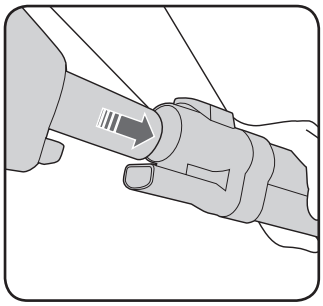

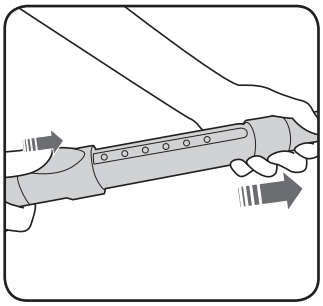

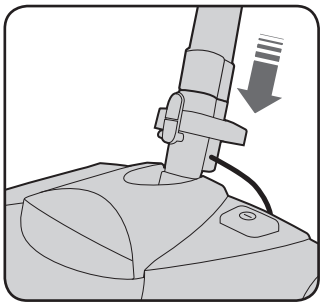

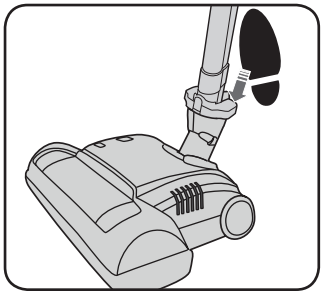

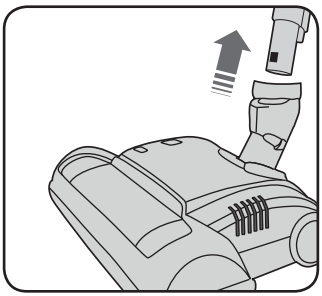

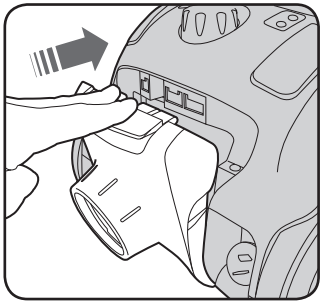

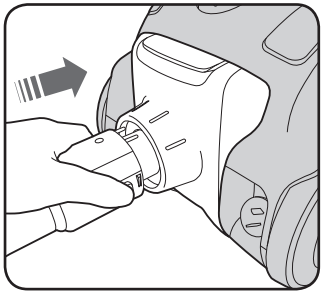

STANDARD ACCESSORIES

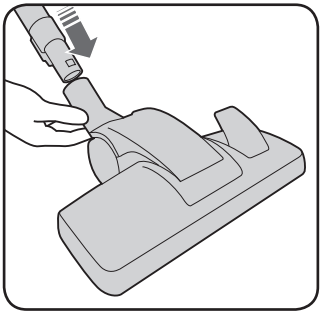

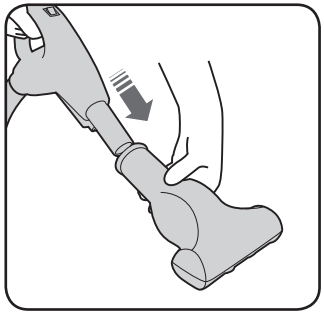

POWERING YOUR WERTHEIM 7000

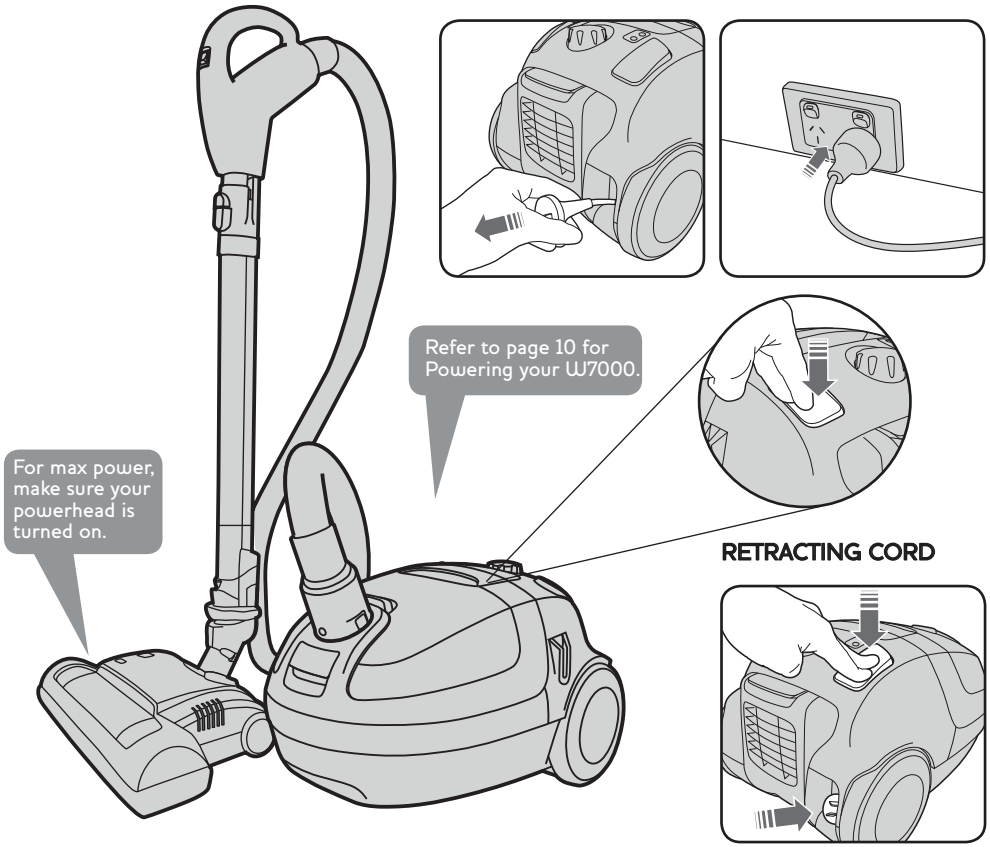

CORRECT FLOOR SETTING

Setting for Powerhead

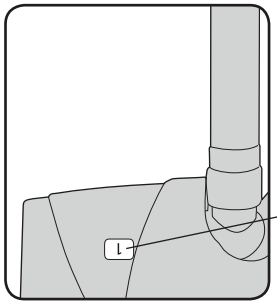

Setting for Floor Tool

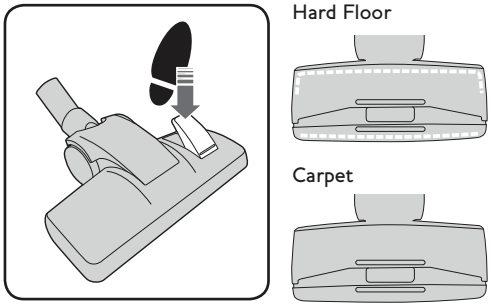

ADJUST POWER SETTING

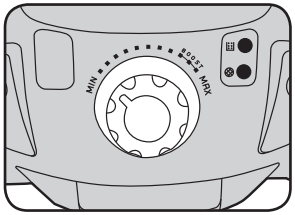

See page 10 for settings.

REPLACING YOUR BAG

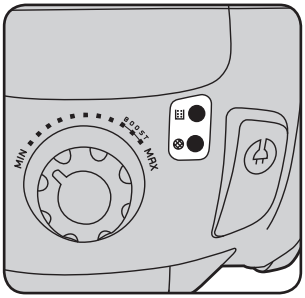

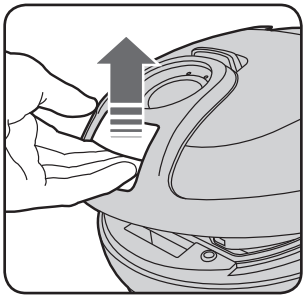

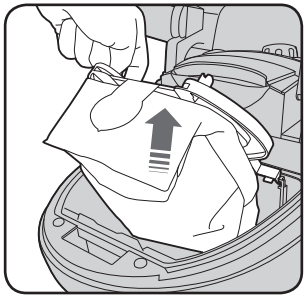

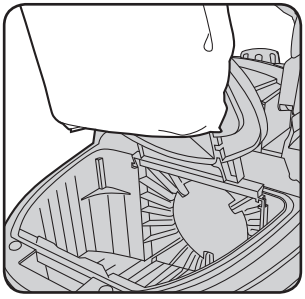

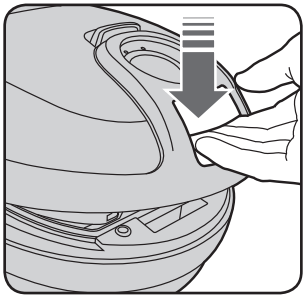

CLEANING YOUR MOTOR FILTER

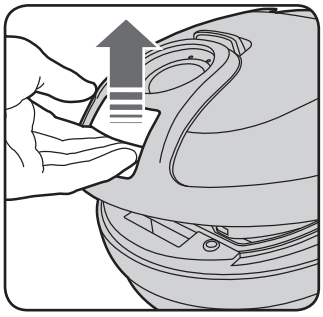

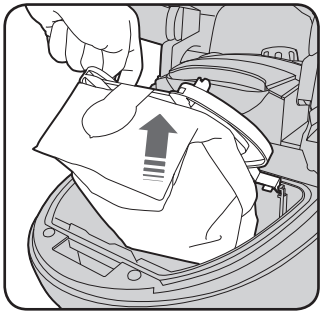

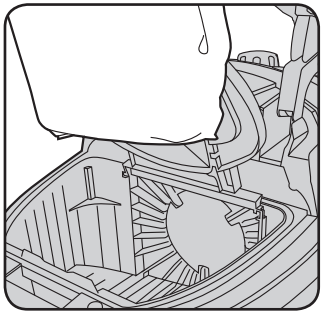

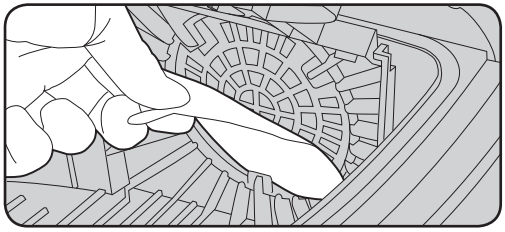

REPLACING THE HEPA FILTER

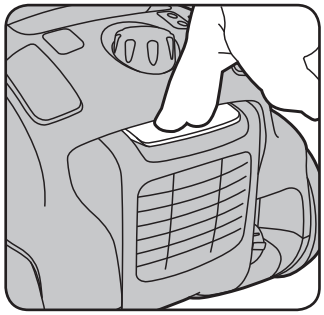
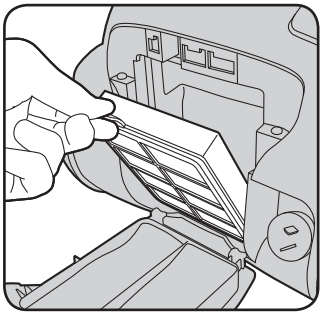
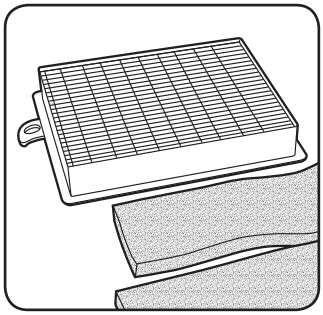

ACCESSORIES STORAGE COMPARTMENT

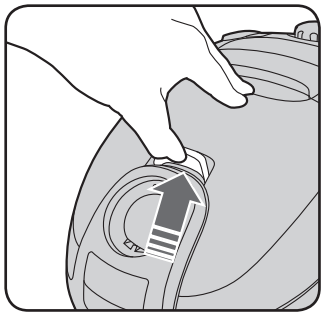
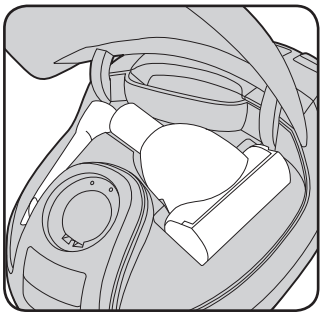

CLEARING POWERHEAD OBSTRUCTIONS - RESETTING POWERHEAD

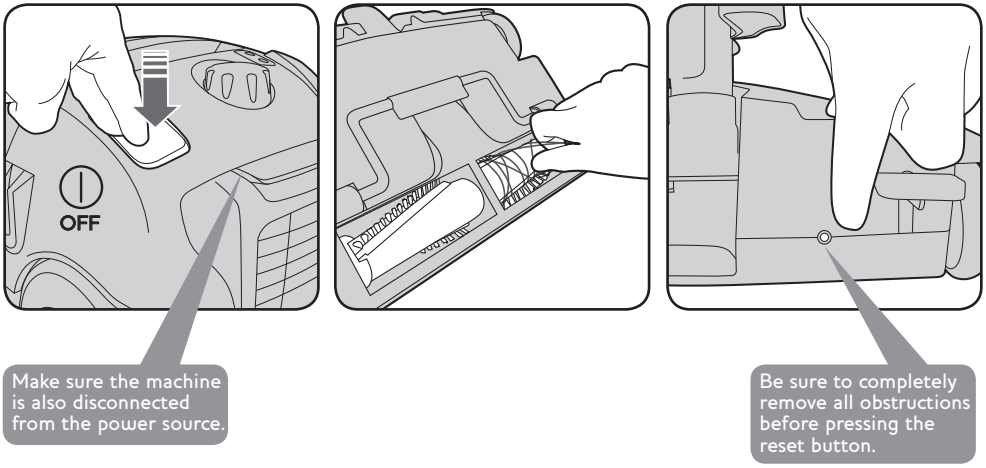
OFF
Make sure the machine is also disconnected from the power source.
Be sure to completely remove all obstructions before pressing the reset button.

PROBLEMS AND TROUBLESHOOTING

If a problem occurs it can usually be solved by referring to the checklist below. If your problem can not be fixed using these tips, please contact our customer support centre (1800 815 270) who will be happy to help.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor does not start or stops	No power supply	Check cord, plug and socket. If still inoperative contact service agent
Suction force gradually decreases	The dust bag is full, filters are dirty, suction hose or wand is blocked	Empty the dust bag, clean or replace filters, remove objects from hose and wand
Powerhead not working	No power supply to powerhead	Ensure that the switch on the handle and powerhead is switched on
	Reset button has tripped	Make sure the roller is clean and then press the reset button (see above)
Roller not rotating on powerhead	Powerhead is not switched on	Check the powerhead is switched on
	The belt is broken	Contact the service agent

ASSEMBLY STEPS - Refer to visual steps on pages 5-9 if required.

The cleaner should be switched off and disconnected from the mains supply before commencing assembly.

- Connect the hose body connector to the cleaner
- Insert the wand into the powerhead
- Press the release button on the telescopic tube to extend or retract to desired length
- Fit the other end of the telescopic tube to the hand piece
- To detach tube from powerhead, press down on the release pedal with your foot

ACCESSORIES

Your Wertheim 7000 comes with a powerhead, a deluxe combination floor tool, a mini turbo brush and crevice tool, a dust brush and a blower attachment.

OPTIONAL ACCESSORIES

- Hard Floor Tool

POWERING YOUR WERTHEIM 7000

If you are using your machine without the powerhead and are using any of the other tools you only need to turn on the power for the machine (not the powerhead).

The switch on the handle is used when you have the powerhead on.

The switch on the powerhead allows you to turn off the rotating brush. (You may not want to change the floor head, but are using on a hard floor & don't want the brush rotating).

- Pull the power cord out from the rear of the vacuum and plug into a power socket (Never extend the power cord further than the yellow mark)
- Press the On/Off button to switch the appliance on
- When you are finished using the appliance, unplug from the power socket and press the power cord retract button to retract the power cord

CORRECT FLOOR SETTING

Deluxe Combination Floor Tool - Has two floor settings. One for hard floors and the other for carpeted surfaces. To adjust the setting, press down on the floor tool lever.

ADJUST POWER SETTING

To adjust the suction from the machine, rotate the variable speed dial. MIN setting to reduce the suction, and MAX setting to increase the suction.

EMPTYING YOUR CLEANER

Before emptying, switch 'OFF' and unplug the appliance

- An indicator light will illuminate when the dust bag is full
- Pull upwards on the lid release button and lift up the dust bag lid
- Slide out dust bag and replace, then close the lid

CLEANING YOUR FILTERS

- Pull upwards on the lid release button and lift up the dust bag lid
- Slide out dust bag
- Firmly pull the filter cover tab to release and remove
- Separate filter from filter cover and rinse with warm water

Ensure filter is completely dry before re-fitting

REPLACING THE HEPA FILTER

Before replacing filters, switch 'OFF' and unplug the appliance

- Pull upwards on the lid release button and lift up the dust bag lid
- Unclip and slide out the HEPA filter
- Replace the HEPA filter and close the dust bag lid

CLEARING POWERHEAD OBSTRUCTIONS - RESETTING POWERHEAD

If the powerhead brushbar is obstructed, it may automatically shut off. If this happens you will need to clear any obstructing objects and reset the powerhead

- Switch 'OFF' and unplug the appliance
- Clear and remove all obstructions caught within the powerhead brushbar
- Press the red button on rear of powerhead to reset
- Return plug into power socket and switch both the appliance and powerhead 'ON' to resume cleaning

wertheim

deep clean engineering

V3 0412